



**AL1 & AL2 Standard Series
Quick Reference Sheet - Primary Guying Only
DEPLOYMENT**




Stand the tripod up with the base plates on the ground and release the Velcro Strap.

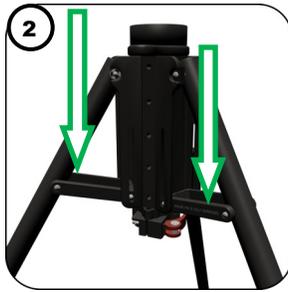

Unfold the tripod legs and make sure the cross bars are locked into position.

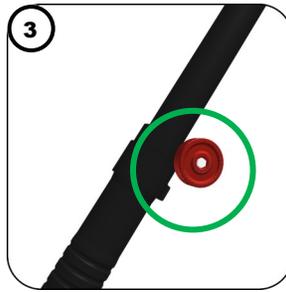

Loosen the turn knobs on each of the tripod legs and allow them to fully extend.

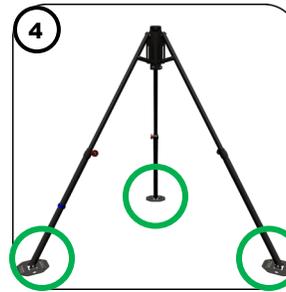


Make sure the base plates are flat on the ground and tighten the turn knobs.




Level the tripod by using the two bubble levels and adjusting the tripod legs.




Secure the tripod by driving stakes through the two holes on each of the 3 tripod base plates.

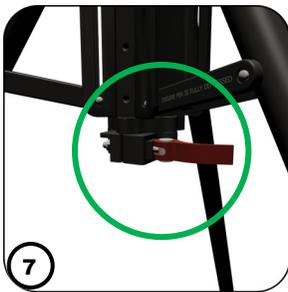

Release the cam lock on the bottom of the tripod.

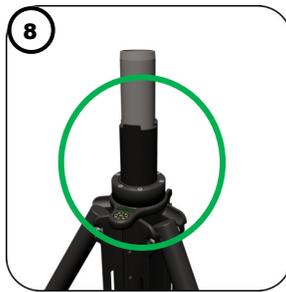

Insert first mast pole leaving at least 4 inches above the tripod and lock the cam lock.

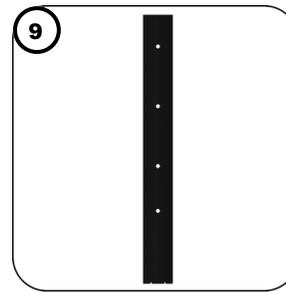


Add the 18 inch mounting pole to the top of the mast pole.




Add the red primary guy ring and pin it to the bottom hole on the mounting pole.




Attach and secure your devices to the mast. Use Velcro straps to secure any cables.

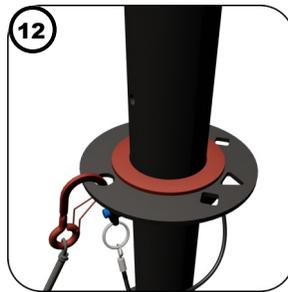


Attach the 1st primary guy rope to the round hole on the red primary guy ring.

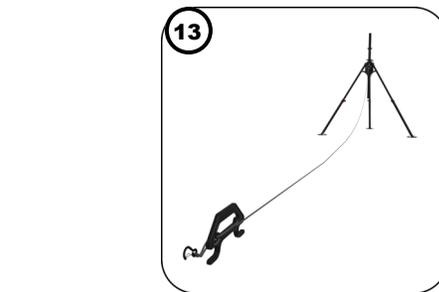


Start at the center of the tripod and unwind the guy rope while walking away from the mast. Take one **NORMAL** step for each meter of height of the mast. 15M = 15 Steps. One person should deploy all 4 guy ropes.

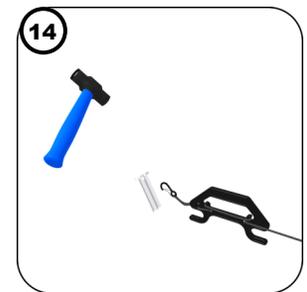


Drive a stake into the ground at an angle and attach the guy rope.

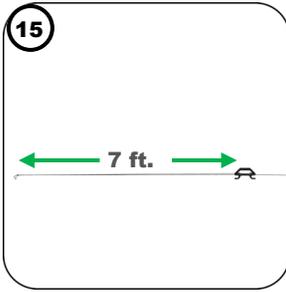

Slide the handle towards the mast approx. 7 feet. This will take up the slack in the guy rope during deployment and prepare you for incremental guying. Repeat this process until all 4 guy ropes are 90 degrees apart.

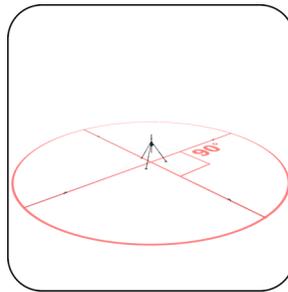

Holding the center mast pole, slowly release the cam lock.


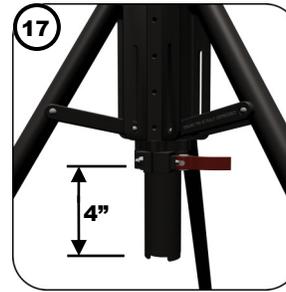


Raise the center mast pole and leave 4 inches visible below the tripod.



Lock the cam lock.

AL1 & AL2 Standard Series
Quick Reference Sheet - Primary Guying Only
DEPLOYMENT

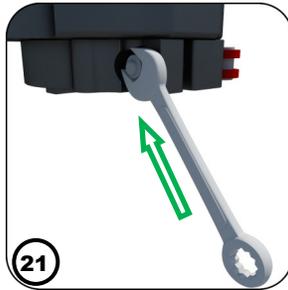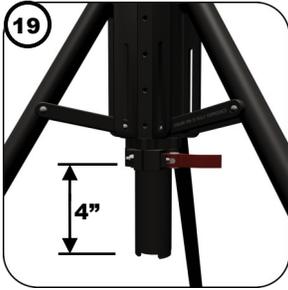



Insert another center mast pole, release the cam lock and raise the mast until 4 inches are visible under the tripod. Lock the cam lock.

WARNING: If at any point the mast begins to slip while the cam lock is locked - **STOP**

Use the 7/16 wrench provided with the system to make adjustments to the cam lock.

Tighten the nut on the cam lock a quarter turn until slipping no longer occurs.

Repeat steps 16 - 19 until you have deployed all the mast poles. Incremental guying may be required.

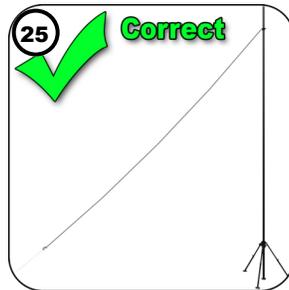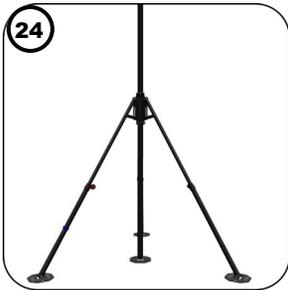

Insert the base pole, slowly lower it to the ground and lock the cam lock.

Adjust the primary guy ropes. The tension should be firm, not slack or taut.

Lock the primary guy ropes by pulling a small amount of slack in the line.

Use your finger and loop the rope over the front hook of the guy handle to secure the primary guy ropes.

Re-level the mast by simply tapping or nudging the base pole with your foot.



Using hammers, drive two stakes through two of the holes in the base plate at an angle.